DIVIDE SERIES TENTS

SETUP GUIDE





Neatly spread out the ground tarp/floor in a flat non sloping area





Grab the set of 4 black poles with white rubber ends and the orange 3 way unions.

Unfold the black poles until straight and place each pole in an angled connection point on the orange 3 way unions.







UNROLL THE CANVAS AND DRAPE THE CANVAS OVER THE POLES







PLACE EACH END OF ANGLED POLES INTO POCKETS IN THE CANVAS TO SECURE THE CORNERS







GRAB 4 STAKES AND STAKE DOWN THE CORNERS OF THE TENT





TAKE THE 4 GOLD POLES AND EXPAND UNTIL STRAIGHT.

PLACE ONE GOLD POLE IN EACH OF THE HORIZONTAL SIDE POCKETS OF THE TENT











ATTACH GUY CLIPS TO MIDDLE OF LATERAL POLES.

INSERT VERTICAL POLES IN GUY STRAP AND TENT BASE



Pull the guy ropes outwardly until the sidewall of the tent is close to 90 degrees from the ground.





There is one small black pole that does not break down. Take this and place it in the canvas loop in the back of the tent and then attach your guy out rope. (note: that there is no vertical upright stay pole for the back wall)





At the front of the tent by the door you will install the thin black vertical stays and then guy out each one.





This is what your tent will look like when all the guy out ropes have been properly tightened.





Then tie in the tent floor. You can tie in the floor or use plastic toggle pieces that we sent you with the tent. Either way works great.





If you are going to use a wood stove, make sure to unzip the floor to the tent and fold it underneath itself so that your floor does not get burned.







When using the stove you will need to uncover the stove jack. The stove jack cover can be taken off and stored elsewhere or you can simply tuck it under the canvas flap a shown here.





The stove jack is designed for the stove pipe to exit the tent vertically. Here is the floor, tent and stove.







#ENJOYTHEWILD

WILDERNESS RIDGE TRAIL LLAMAS